



# Typical Mushroom Anchor Mooring Set-up

**(For Reference Only)**



**Shackle**


**Swivel**

**Eye-Splice with Thimble**

Hard Buoys are NOT recommended  
Do NOT attach Painter to top of Buoy


- Nylon Painters**
- Minimum ½” x ~12’ long
  - Will vary with the size of the boat
  - Recommend using largest size that will fit your cleats
  - Recommend running Painters through inflatable Fenders (can eliminate Buoy with this method)

High Water (Storm)

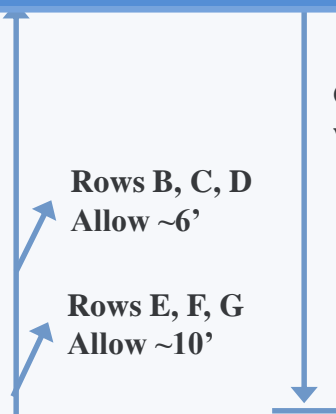

Corrosion to ~6’ below water line

**All Galvanized Materials**

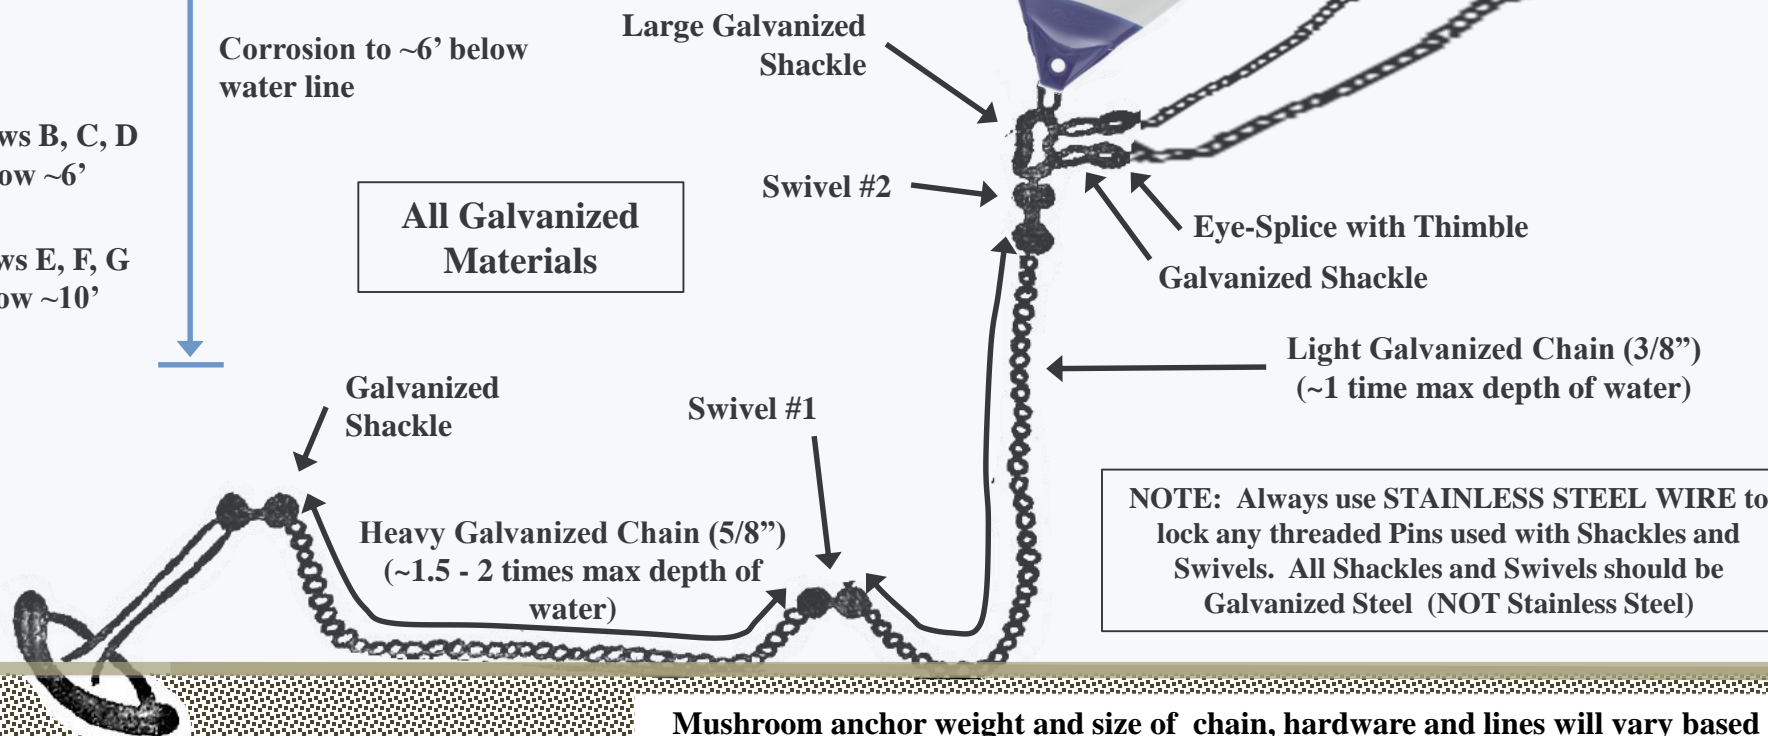

**NOTE: Always use STAINLESS STEEL WIRE to lock any threaded Pins used with Shackles and Swivels. All Shackles and Swivels should be Galvanized Steel (NOT Stainless Steel)**

**NOTE: Mushroom anchor must be worked into bottom for maximum holding power.**

**Mushroom anchor weight and size of chain, hardware and lines will vary based on the size of your boat and position in the mooring field. Consult Chapman’s Piloting & Seamanship handbook for additional guidance on Mooring set-up**